

# Venue Wideband Receiver

## Modular Receiver/Multicoupler System



### Hardware/Software Installation and Configuration

#### Includes Three models:

- **Wideband (blocks 21 through 29)**
- **Wideband Low (blocks 470 through 26)**
- **Wideband High (blocks 25 through 33)**

Fill in for your records:

Serial Number:

Purchase Date:



## Introduction

The Venue Wideband receiver is a modular rack mount design for use with a wide variety of transmitters from Lectrosonics and other manufacturers. Designed for maximum versatility and performance, the wideband design offers the flexibility needed in today's changing and increasingly congested RF environments.

A Venue receiver is a "system" that consists of a master unit and up to six receiver modules. Two different types of receiver modules are available. The standard module (VRS) is an excellent choice for fixed installations where fairly clear RF spectrum is available. The tracking module (VRT) is a more costly alternative, but its tracking front-end makes it the better choice for use in congested RF environments. VRpanel software is included to simplify setup and monitoring.

This guide covers the essential steps and settings needed to get a Venue system up and running. It covers the hardware installation, configuration using the LCD on the master unit, setting up a USB port on the computer and installing the VRpanel software.

LecNet2 software runs under Microsoft Windows® 2000, XP and Vista™ operating systems.\* An online Help in the software includes a listing of commands used to control the Venue through the serial ports.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this equipment not expressly approved by Lectrosonics, Inc. could void the user's authority to operate it.

\* Windows is a registered trademark of Microsoft Corp.  
Vista is a trademark of Microsoft Corp.




# Table of Contents

<b>Introduction</b> .....	<b>3</b>
<b>Venue System Controls and Functions</b> .....	<b>6</b>
Front Panel.....	6
Rear Panel.....	7
<b>Hardware Installation</b> .....	<b>8</b>
Receiver Modules .....	8
Rack Installation.....	8
Audio Outputs.....	8
RS-232 Port Pinouts .....	9
Connections for Computer Interface .....	9
<b>Initial Startup</b> .....	<b>10</b>
<b>Navigating the LCD Menus and Screens</b> .....	<b>11</b>
<b>Resetting to Factory Defaults</b> .....	<b>12</b>
<b>System Setup with the LCD</b> .....	<b>12</b>
Selecting Compatibility Modes.....	12
Selecting the Noise Reduction Mode.....	12
Selecting Diversity Modes.....	13
Selecting the Tuning Mode.....	14
Finding Clear Frequencies with SmartTune .....	14
Finding Clear Channels Using Full Spectrum Scan.....	15
Adjusting Audio Output Levels .....	16
Selecting Audio Phase.....	16
Selecting Transmitter Battery Status Monitoring Mode .....	17
Locking Out the Front Panel Controls .....	18
<b>Installing LecNet2™ Software and USB Driver</b> .....	<b>19</b>
<b>Setting Up the Venue Receiver Using VRpanel</b> .....	<b>22</b>
Opening VRpanel with USB Port .....	22
Opening VRpanel with a COM Port .....	22
VRpanel Main Window.....	22
Main Window Top Menu Items .....	23
Popup Menu Items.....	23
<b>Antenna Use and Placement</b> .....	<b>25</b>
Powering Remote RF Amplifiers .....	25
<b>Pre-coordinated Frequencies</b> .....	<b>26</b>
Compatible Frequency Table.....	26
Compatibility Diagram.....	27
<b>Diagnostics</b> .....	<b>28</b>
Multi-channel System Checkout.....	28
Pilot Tone Bypass.....	28
<b>Accessories and Common Replacement Parts</b> .....	<b>29</b>
Remote Antennas .....	29
Coaxial Cable.....	29
Coaxial RF Amplifier .....	29
Common Replacement Parts.....	29
<b>Service and Repair</b> .....	<b>30</b>
Returning Units for Repair .....	30

# Venue System Controls and Functions

## Front Panel

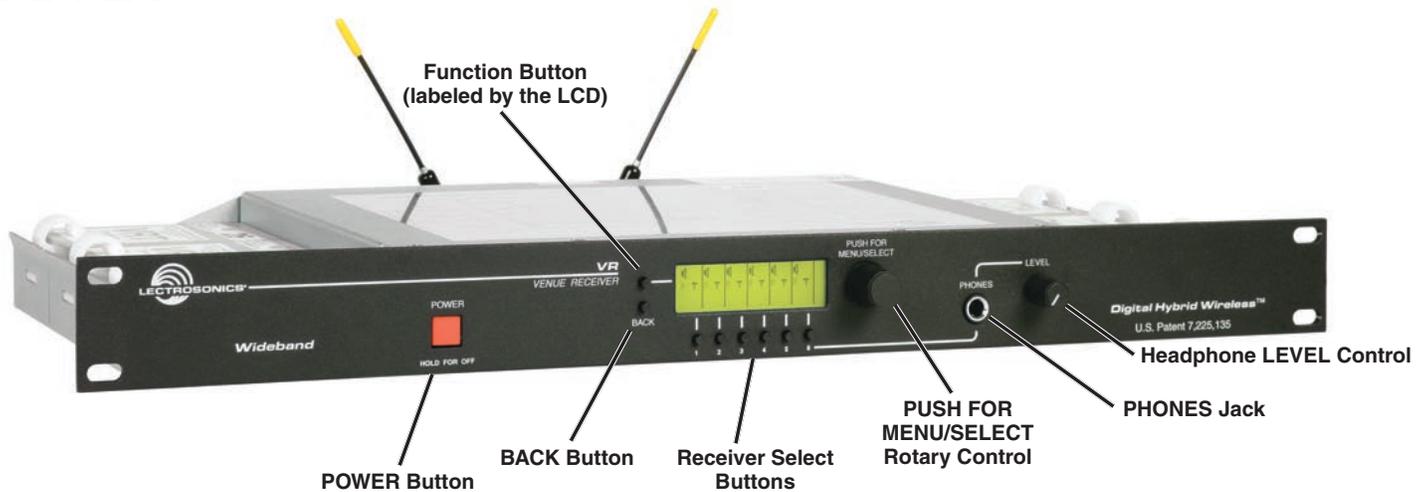

The Venue receiver master unit (VRM) serves as a “host assembly” for up to six receiver modules. The standard module (VRS) and tracking module (VRT) can be mixed and matched in the assembly in any combination to suit the needs of various applications.

The VRM front panel provides an LCD for system setup, monitoring and troubleshooting. During normal operation, the LCD shows RF and audio levels, diversity status, pilot tone status (where applicable) and transmitter battery status (in certain modes) for all six receivers at the same time. Individual screens for each receiver provide additional information and adjustments.

A built-in analyzer scans the tunable spectrum of the receiver to assist in finding clear operating frequencies. The spectrum scan data is presented in a graphical format on the LCD.

### POWER Button

Turns the power on and off. A brief press also clears the spectrum scan data after the spectrum analyzer has been used. Press and hold the button for a few seconds to turn the unit off.

### Function Button

Used for various functions in selected Setup Screens as labeled on the LCD.

### BACK Button

The Back Button is used to return to the previous menu or setup screen.

### LCD Screen

The LCD is a backlit, graphics-type Liquid Crystal Display used to set up and monitor system operation.

### Receiver Select Buttons

The six Receiver Select Buttons are used to select individual installed receiver modules, for monitoring via the PHONES jack and for setup and adjustment.

### PUSH FOR MENU/SELECT Rotary Control

This control, called the MENU/SELECT control for short, is a pushbutton switch and rotary knob used for navigating and selecting setup menus and screens, and for selecting parameters within the setup screens.


### PHONES Jack and LEVEL Control

The LEVEL control is used to adjust the output level of the front panel PHONES jack for individual channel monitoring. It does not affect the output levels at the rear panel XLR jacks. Only the audio from a single receiver (or a diversity pair) selected via the Receiver Select Buttons will be present at this jack.

The PHONES jack can also be used as an audio output for recording when using the Walk Test Recorder.

**NOTE:** An explanation of the Walk Test Recorder is presented in the section entitled Setting Up the Venue Receiver Using VRpanel.

## Rear Panel

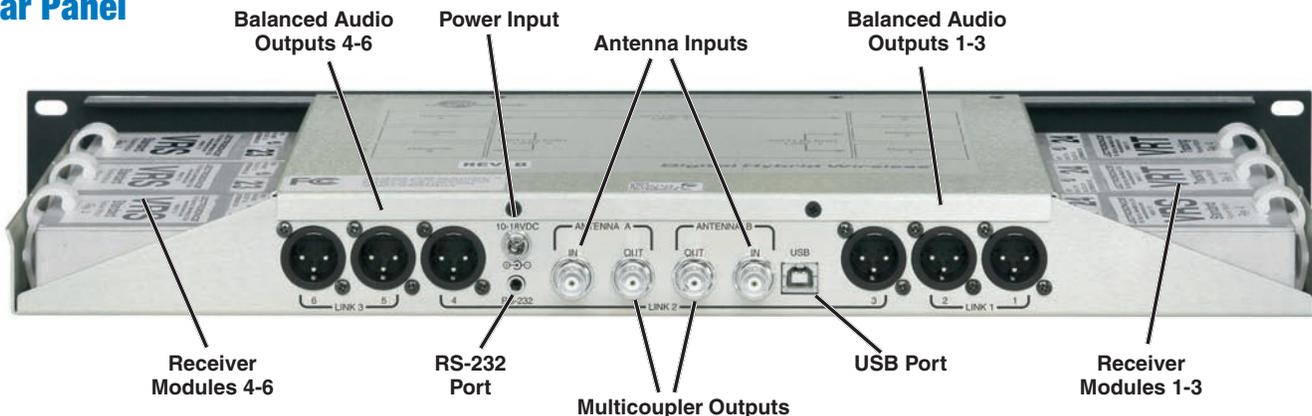

The rear panel provides six balanced XLR audio outputs, antenna inputs, “loop thru” antenna outputs from an internal multicoupler, a power jack with a locking connector, plus USB and RS-232 serial ports for setup and control.

### Receiver Modules

Up to six receiver modules can be installed in each Venue receiver rack mount chassis. Spring tensioned clips retain the receiver modules to maintain secure connections with the host assembly.

### Audio Outputs

Six balanced XLR audio output jacks connect the Venue receiver to external equipment. By default, pin 2 is audio pos (+). The polarity of each output can be reversed in the LCD setup menus or with the software.

### Power Input

The receiver is powered from +10 VDC to +18 VDC, with the center pin of the connector positive (+). The input is diode protected to prevent damage if the power is accidentally applied with reversed polarity. The connector includes a threaded locking sleeve.

### RS-232 Port

A serial RS-232 interface is provided for setup and control of the Venue System from computers or other devices using industry standard RS-232 communication links.

### Antenna Inputs

The two outermost BNC connectors are provided for use with right-angle whip antennas, cables from remote antennas, or cables from another Venue receiver. DC voltage can be supplied on these connectors from an internal source to power remote RF amplifiers. The power is enabled with jumpers on the circuit board. See the section on Antenna Use and Placement for details.

### Multicoupler Outputs

The built-in antenna multicoupler provides RF distribution for the six receiver modules and a “loop thru” output at the same level to deliver the RF signal to another Venue receiver. The second receiver can then feed a third receiver and so on, to create a “stack” that operates with a single pair of antennas. The result is very efficient use of rack space and a cost savings by not having to purchase a separate antenna multicoupler.

*Note: Venue receivers with a 50 MHz bandwidth must be on the same frequency blocks to use the antenna loop through.*


### USB Port

Standard USB Version 1.1 port for setup and control of the receiver from computer systems using Windows® 2000, XP or Vista™ operating systems.

# Hardware Installation

## Receiver Modules

VRS and VRT receiver modules can be mixed in the same chassis. For ratio diversity operation, both modules in the pair must be on the same frequency block and positioned in the assembly in keeping with the OPTI-BLEND labeling on top of the chassis housing.

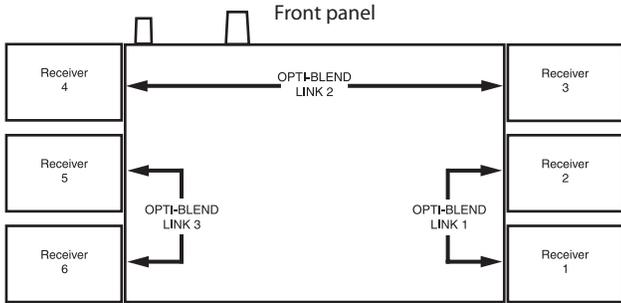


All modules must be within the frequency passband of the host assembly. Frequency blocks are marked on the receiver module and chassis housings.

## Installing Receiver Modules

1. Turn the power off.

The receiver modules interface with the main assembly through multi-pin connectors on either side of the chassis. Insert the module straight down and then slide it toward the main housing to insert the connector pins. The module should sit flush against the side of the housing.

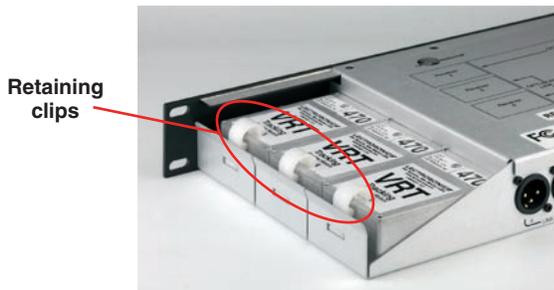

**Caution:** Make sure the connectors align correctly. Do not force the module onto the tab. Excessive force may damage the connectors.

2. Align the ridge on the retaining clip with the slot in the chassis and press the clip downward until the ridge snaps into the slot in the side panel.

## Removing Receiver Modules

1. Turn the power off.
2. Remove the retaining clip by pressing on it sideways to release it from the slot in the side panel. Then pull upward to remove it.
3. Pull outward on the module to release the connector and then lift it upward out of the chassis. Holes in the underside of the chassis allow you to grip the module on the top and bottom.


## Rack Installation

1. Mount the receiver(s) in the desired rack location(s). There are no special ventilation requirements.
2. Connect the antennas or coaxial cables to the antenna input connectors (outermost) on the rear panel.

**Note:** The frequency bandwidth of the antennas must cover the range of the modules in use.

3. For multiple unit installations, a “loop thru” is available to feed two or three receivers from a single antenna pair. Connect coaxial cables from the multicoupler outputs on the first receiver to the antenna inputs on the next receiver in the stack.

The outermost connectors are the inputs connected to the antennas on the first unit in the stack. The innermost connectors are the outputs that feed the next assembly in the rack.

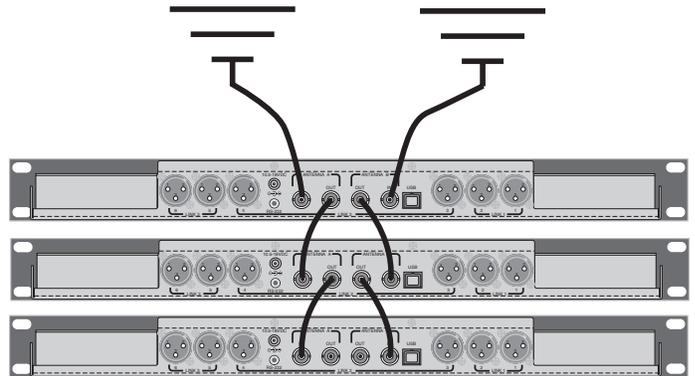

4. Plug the power supply into a suitable outlet and plug the power connector into the Power Input Jack.
5. Turn down the audio inputs on all the externally connected equipment, then connect cables to the appropriate Audio Output XLR Jacks.


## Audio Outputs

Balanced XLR audio outputs on the rear panel can be used to drive balanced or unbalanced inputs at line level on any type of mixer, recorder or other type of audio equipment.




**Note:** When the modules are paired for diversity operation, the audio will appear at both XLR jacks associated with the module pair.


The audio output wiring is as follows:

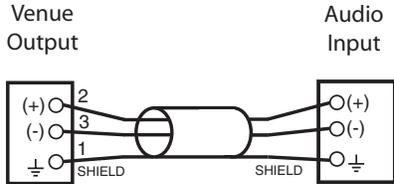

Balanced with 3-wire cable

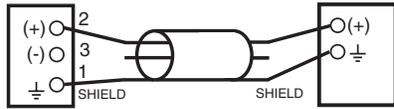

Unbalanced with 3-wire cable

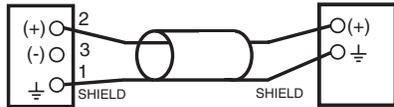


Unbalanced with 2-wire cable


### RS-232 Port Pinouts

Port wiring for the LecNet2 interface is as follows:


LecNet Device to PC

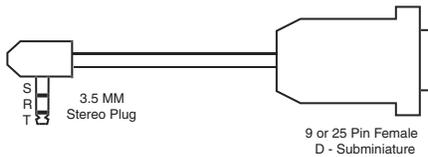

Wiring Diagram, 9 Pin D-Sub

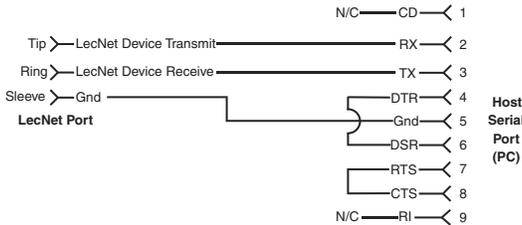

Wiring Diagram, 25 Pin D-Sub

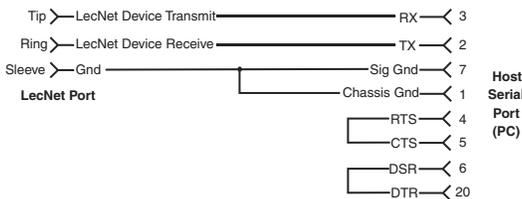


**NOTE:** Convenient ethernet to RS-232 interfaces are available from Extron® Electronics.\* Visit: [www.extron.com](http://www.extron.com) and search for "IPL T" on the home page.

### Connections for Computer Interface


Connection to a computer can be made via USB or RS-232 ports. Multiple units are easily connected using a USB hub.

**NOTE:** Audio is not passed through these ports. They are used only for control and monitoring.


A single receiver connects directly to the computer.

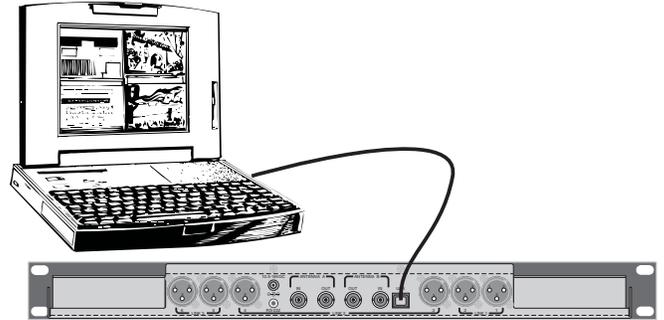

Multiple receivers can be conveniently connected through a USB hub. VRpanel software allows panes to be added to the control panel main window to communicate with all receivers simultaneously.

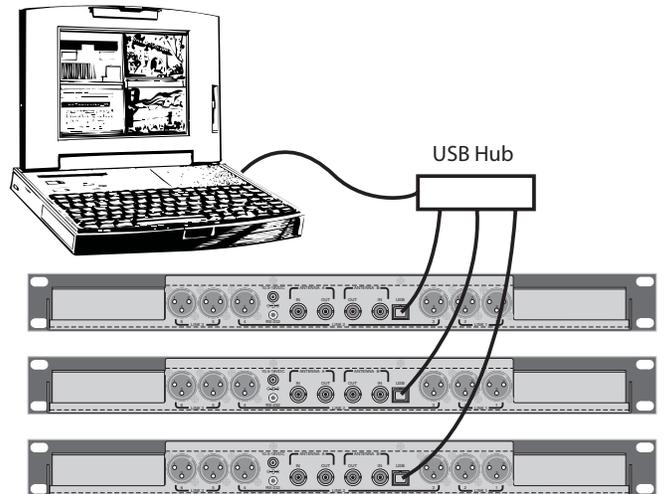

One or more Venue receivers can also be connected via multiple RS-232 ports on PC-MCIA cards and remote control systems.

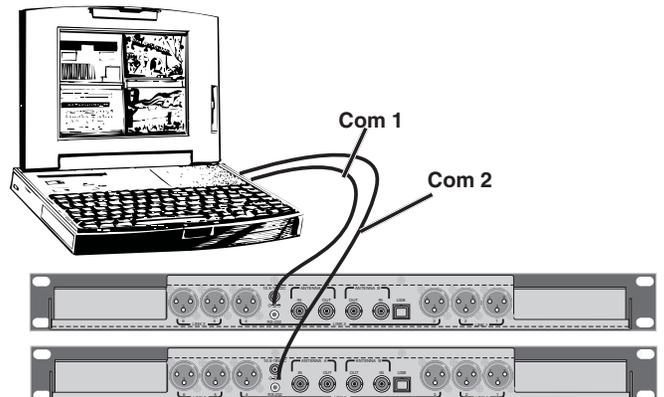


Extron® is a registered trademark of Extron Electronics.

# Initial Startup


When the Venue receiver is first powered up the LCD will show the firmware revision and the tuning range of the host assembly. The wideband version of the VRM covers the entire 230 MHz bandwidth of frequency blocks 21 through 29.



As the boot sequence continues, the display will switch to an overview of all six receiver channels. In this example, six receiver modules are installed but no transmitters are turned on. In this case the "P" will be blinking since no pilot tone is detected.

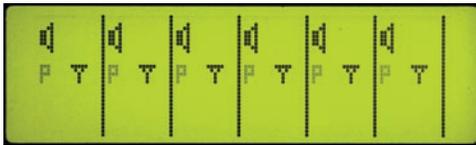

The wideband Venue receiver is different than the 50 MHz version in that the receiver modules are detected through a manual process rather than automatically at boot up. Press the MENU/SELECT control and rotate it to select "Detect" on the menu.

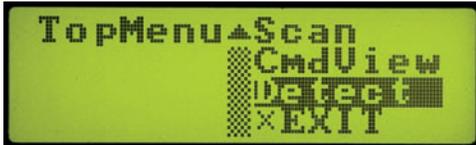

Press the MENU/SELECT control to launch the detection process.




It takes about 45 seconds to detect all the modules and update the memory in the host assembly. Once completed, the LCD will briefly display the results showing the frequencies of the installed modules.




If a slot is not occupied by a module, the display will place an "X" in that position.



The display then switches to the overview of all six channels.

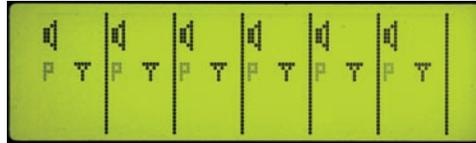

Any slot that is not occupied by a module will leave a blank space in the overview display.

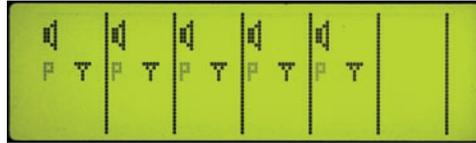


If a module in any position has been removed, changed or added since the last use, the LCD will flash a message advising that the Detect process needs to be run again.




In normal operation with all six channels running, the overview display will include:

- Audio level
- RF level
- Diversity antenna phase activity
- Pilot tone status
- Transmitter battery status

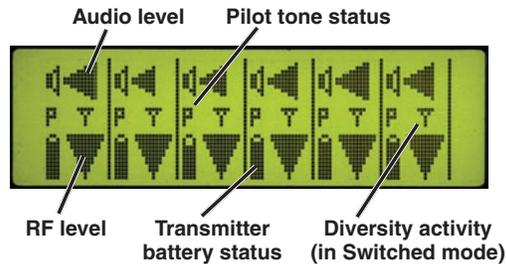


Once the initial startup is complete, go to the next section of this manual for details on setup and configuration options.

To power off the unit, press and hold the red power switch for several seconds. The LCD will display a message briefly then power down.

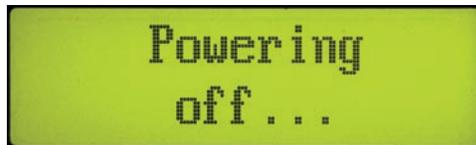


# Navigating the LCD Menus and Screens

Front panel controls provide access to screens and menus for setup. The Function Button, Back Button, Receiver Select buttons and the MENU/SELECT control are used to make selections and adjust parameters.

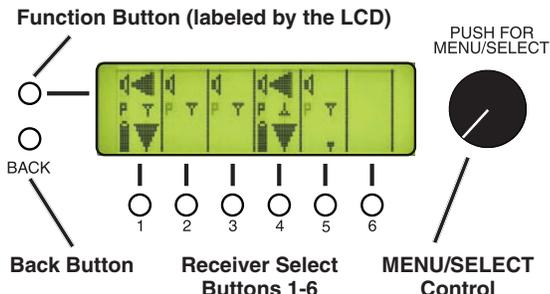

The overview screen displays a summary of all six channels, as shown above. This is a good starting point for navigating to any menu or setup screen. Pressing the BACK button repeatedly from any menu or screen will eventually return to this overview screen.

From the overview screen, pressing one of the six Receiver Select Buttons will switch to the detail screen for the associated receiver module to display all current settings, levels and status.

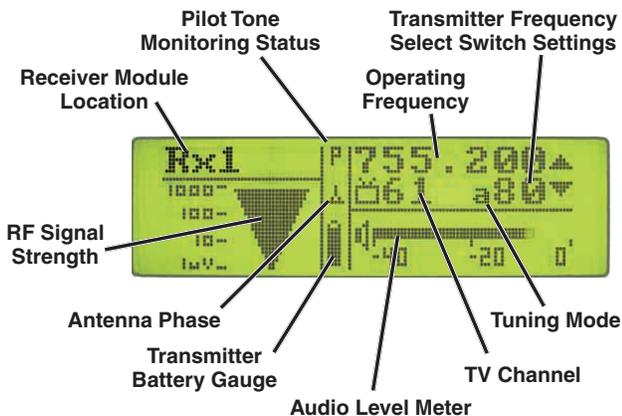

Pressing the Receiver Select Button again will switch to the receiver module information screen to show the basic setup.



Press the BACK button twice to return to the overview screen.

From the overview screen, press the MENU/SELECT control to open the TopMenu, rotate the control to select an item, then press the control to enter the setup screen for that item.



In a setup screen such as the LockSet example shown here, up/down arrows prompt you to change the setting by rotating the MENU/SELECT control.



When the desired setting or value is displayed, press the MENU/SELECT control or BACK button to return to the previous menu.

Selecting SetUpRx (set up receiver) in the TopMenu will take you to another menu where all settings for the receiver modules can be made.



Select an item with the MENU/SELECT control and press the control to open the setup screen ("Level" in this example).



Setup screens for the receiver modules display the settings for the selected module and allow immediate access to all modules by pressing the Receiver Select Buttons. Receiver module 1 (Rx1) is selected in this example with its output level set at -3 dBu.




If another option is available, it will appear in the left hand section of the LCD ("TONE" in this example). Press the Function Button to select and deselect this option with repeated presses. The display will highlight the option when it is selected.

**NOTE:** Settings take effect immediately and are stored until changed again. Pilot Tone Bypass is different in that it resets to the default value when the power is cycled.

# Resetting to Factory Defaults

Resetting to Factory Defaults can be a time saver for setting up the system. Start with the power turned off, then hold Receiver Select Buttons 5 and 6 while powering up the system.

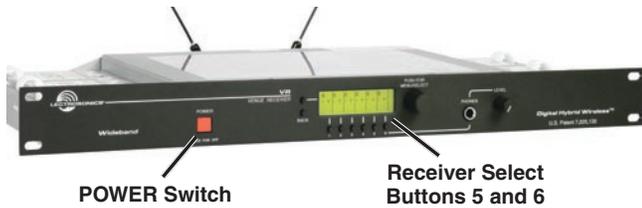

The Factory Default Settings are:

<b>Level</b>	+00 dBu
<b>Phase</b>	NORMAL
<b>TxBatt</b>	9V ALK
<b>SmartNR</b>	NORMAL
<b>Compat</b>	Dig. Hybrid
<b>Tuning</b>	NORMAL MODE
<b>DivMode</b>	Switched
<b>LockSet</b>	NOT LOCKED
<b>RxCh</b>	8, 0

# System Setup with the LCD

It is generally best to complete these steps in the sequence shown.

- Select compatibility modes
- Select Smart Noise Reduction mode (for Digital Hybrid Compat Mode only)
- Select diversity modes
- Find clear channels and set transmitters to match the receivers
- Adjust audio output level
- Select audio signal phase
- Select transmitter battery monitoring mode
- Control panel lockout

## Selecting Compatibility Modes

Navigate to the Compat setup screen.



Six compatibility modes are available to match various transmitter types. In this example, the Digital Hybrid compatibility mode is selected for receiver module 1.



Press the Receiver Select button for each module and rotate the MENU/SELECT control to select the mode.

The following modes are available:

Compat Setup Mode	Description
Dig. Hybrid	Lectrosonics Digital Hybrid (HYB)
Mode 3	Mode 3 (M.3) (call for details)
200 Series	Lectrosonics 200 Series (200)
100 Series	Lectrosonics 100 Series (100)
IFB	Lectrosonics IFB Series (IFB)
Mode 6	Mode 6 (M.6) (call for details)

**Shortcut:** Press and hold the Receiver Select button under the selected module (module 1 in the example above) then press the buttons under the other modules that are to be set to the same mode.

If you are using Digital Hybrid transmitters, set them and the matching receiver modules to the Dig. Hybrid mode for best performance.

## Selecting the Noise Reduction Mode

When the Compat Mode is set to Digital Hybrid, three settings are available that affect the high frequency audio content and noise:

- **NORMAL** (factory default) applies a moderate amount of noise reduction, dramatically reducing hiss with virtually no discernible side effects.
- **FULL** applies more aggressive noise reduction with transparency superior to the noise reduction system used for many years in the earlier Lectrosonics wide deviation analog systems.
- **OFF** applies no noise reduction for complete transparency.

Navigate to the SmartNR setup screen.



Select the receiver module with Receiver Select Button and rotate the MENU/SELECT control to the desired mode. Listen to the audio signal as you rotate the knob and select the mode that best fits the situation.

*Note: If the selected Receiver Module is part of a ratio or frequency diversity pair, the mode will automatically be set for both receiver modules in the pair.*

When any Compat Mode other than Dig. Hybrid is selected, FIXED will automatically be selected.



In this example, receiver modules 4, 5 and 6 are set to the FIXED mode with no adjustment available.

### Selecting Diversity Modes

Navigate to the DivMode setup screen.



Three diversity reception modes are available:

- **Switched Diversity** uses one receiver module per audio channel.
- **Ratio Diversity (OptiBlend™)** uses two receiver modules per audio channel.
- **Frequency Diversity** uses two receiver modules and two transmitters per audio channel.


Press the Receiver Select Buttons to enter the setup screens for the receiver modules.

#### Switched Diversity



In this mode the signals from both antennas are combined into a single receiver module, with the phase of one of them inverted back and forth so that they always add to one another. The process reduces dropouts and provides a stronger signal than a single antenna.

#### Ratio Diversity (OptiBlend™)

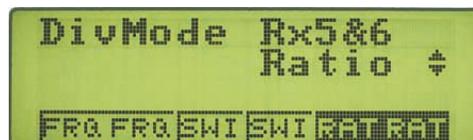


Ratio diversity uses two adjacent receiver modules to pick up a single transmitter. The audio outputs of the modules are blended (mixed) together, using more or less audio from each module based upon which module has the stronger RF signal.

Ratio diversity anticipates dropouts before they occur, rather than waiting until the RF signal level is very weak and on the verge of noise or dropout. The comparison of the RF signal levels in the modules begins when the RF level is still high, so the circuit can blend in more audio from the module with the stronger signal before the signal decays enough to cause noise.

The blending action is smooth and seamless to avoid any audible artifacts that can occur with abrupt switching. Most of the time both receiver modules have good signals, so the audio is blended equally, which improves the signal to noise ratio by 3 dB.

The blended audio appears at the rear panel XLR outputs of both modules.

#### Frequency Diversity

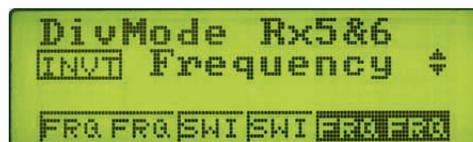

Frequency Diversity differs from the other two diversity modes in that it uses two receiver modules and two transmitters operating on different frequencies. The purpose of this mode is to have redundancy in the system for critical productions, such as live television, to guard against failures caused by dead batteries and multipath dropouts. The blending process to combine the audio from the receiver modules is the same as that used for OptiBlend ratio diversity.

Frequency Diversity requires that the levels of the two audio channels to be closely matched to avoid audible level changes as the blending action takes place. In order for this blending to work properly, a special test mode helps to get the transmitter levels exactly matched. The test mode is automatically activated when the DivMode Setup Screen is active and Frequency Diversity is selected, as shown in the LCD photo above.

*Note: In Frequency Diversity mode, both transmitters must be the same type (usually the same model). The microphones must also be placed very close together to minimize comb filtering.*

To prepare for operation in the Frequency Diversity mode, make the following adjustments:

1. Set up the transmitters according to their instructions. Plug a set of headphones into the front panel PHONES jack to monitor the blended output. You can also monitor the output from the rear panel XLR jack for either module in the pair.
2. While listening to the blended output, adjust the gain control on one of the transmitters so that the audio loudness drops way down (nulls) as the two channels cancel each other. If the output does not null, then reset the transmitter input gain control back to where it was and press the Function button on the front panel next to the word INVT on the LCD. This will invert the phase of the audio on the second module so it will null properly.



INVT shown in Off Position

Depending on how microphones are wired and other vagaries, either position of the INVT toggle switch might achieve the null. Keep toggling the switch until the null is found, adjust the level for the deepest null, then press INVT one more time to put the transmitter audio back in phase.

### Selecting the Tuning Mode

Pre-coordinated tuning groups are stored in memory to simplify frequency coordination. The groups are labeled GROUP a, b, c and d on the LCD, with eight frequencies stored in each one. Refer to the section near the back of this manual entitled Pre-coordinated Frequencies for details on compatibility and using these groups.




Select a through d

Three additional modes are also available to enable compatibility with non-standard transmitters and storing custom frequency sets. Navigate to the Tuning menu and press the MENU/SELECT control.

**NORMAL MODE** is the standard Lectrosonics mode with 256 frequencies in 100 kHz steps. A unique pilot tone is present for each frequency.




**FINE MODE** allows tuning to 1024 frequencies in 25 kHz steps for compatibility with older and non-Lectrosonics transmitters. Pilot tone frequency is set to the next lower even 100kHz frequency. For example, 650.000, 650.025, 650.050 and 650.075 all use the same pilot tone frequency.

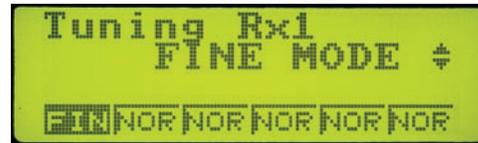


**CUSTOM MODE** is a special mode used to store up to 50 frequencies per block in 25 kHz steps. Frequencies are stored in memory in a “table” with positions numbered 0 through 49. The pilot tone frequency is defined by the position of each frequency in the table.



The Receiver Detail window will indicate the selected mode and frequency information. In the FINE mode transmitter switch settings will be shown when the frequency is on an even 100 kHz step. In the CUSTOM mode the position of the frequency in the table of 50 stored in memory will be shown.

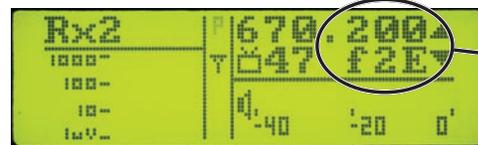

FINE mode on 100kHz step; Tx switch settings shown

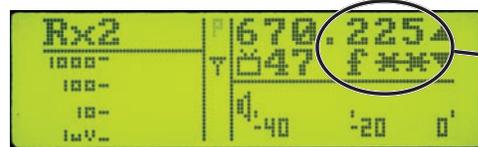

FINE mode NOT 100kHz step; Tx switch settings not shown



CUSTOM mode; memory position shown

### Finding Clear Frequencies with SmartTune

SmartTune simplifies setup by scanning the tuning range of the receiver and automatically setting a re-

ceiver module to a clear frequency. A receiver module is selected, a scan is completed and the frequency is set for that module. A prompt appears, reminding you to turn on a transmitter on the newly selected frequency, and the procedure continues until all modules have been tuned to clear frequencies.

**NOTE:** SmartTune is only available using the LCD and front panel controls. It is not implemented in the software.

1. Navigate to the SmrtTun setup screen and press the MENU/SELECT control.



2. Press the Receiver Select Button for the module you wish to tune and scanning will begin.



When the full spectrum has been scanned, the cursor will stop moving and blink briefly on the newly selected frequency briefly.

3. The display will then switch back to the receiver selection screen and ask if you want to tune another module.



4. If you select Yes the display will remind you to turn on the transmitter for the receiver you just tuned.



When the transmitter is turned on and detected, the display will return to receiver selection (Step 2) and prompt you to select the next receiver.

5. Repeat steps 2 through 4 for all receiver modules that will be used.

In most cases the system will be ready to use after SmartTune has been run on all modules, however, it's a good idea to perform a system checkout to verify

the compatibility of the frequencies selected. Refer to the section entitled Diagnostics near the back of this manual for details.

## Finding Clear Channels with Tuning Groups a through d

Groups "a" through "d" contain 8 frequencies each that can be used together in certain combinations. In brief, "a" and "b" are compatible with each and "c" and "d" are compatible with each. Other combinations require testing. Refer to the section entitled Pre-coordinated Frequencies for details on using these groups.

To use groups a through d, complete the following steps:

1. Navigate to the Tuning setup screen.




2. Select each module in turn with the Receiver Select Buttons and select the desired tuning group. Then return to the overview screen.
3. Turn transmitters off. From the overview screen, open the receiver detail screen for each module and rotate the MENU/SELECT control to select a frequency where no RF signal is indicated.

## Finding Clear Channels Using Full Spectrum Scan

In crowded RF environments, it may not be possible to find enough clear channels using a Tuning Group. The internal spectrum scanner can then be used to find clear channels manually across the entire tuning range of the receiver in 100 kHz steps.

1. Turn off all transmitters and set all receiver modules to the NORMAL tuning mode (not a tuning group).
2. Select Scan from the TopMenu and press the MENU/SELECT control.

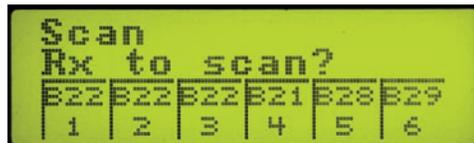


Select the receiver module to use for scanning and press MENU/SELECT. The scanning begins automatically.

- Allow the scanner to continue sweeping through the tuning range several times, then press the Function button to enter "Stop Mode."




- With the scanning stopped, rotate the MENU/SELECT control to adjust the frequency to clear spectrum. Press the Function Button to ZOOM to a close up view of the scan results.

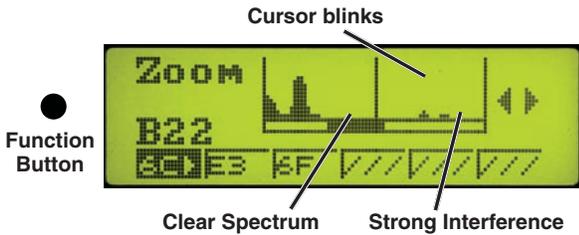

- Press the BACK button to return to the "Stop Mode."

**NOTE:** At any point in the Stop or Zoom screens, you can select any module on the same block to tune.

- Press the BACK button to return the previous menu to select the next receiver to use for scanning.

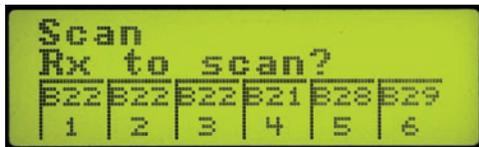

- Continue from step 2 to scan all blocks that are installed.
- Conduct a system checkout with the procedure explained in the section entitled Diagnostics.

### Adjusting Audio Output Levels

The audio output levels at the rear panel XLR jacks are software controlled. (The front panel LEVEL knob affects the PHONES output only.)


The optimum output level will provide the highest level signal possible without overloading the input to external equipment or driving a subsequent stage in the signal chain into limiting or compression. Ideally, the gain needed to drive the rest of the signal chain should be present at the receiver outputs, with each successive stage in other equipment set to unity (no gain or loss).

**NOTE:** In Ratio Diversity and Frequency Diversity modes, the receiver modules are paired 1-2, 3-4, 5-6. Setting the audio level output on either module in the pair, sets the audio output to the same level on both of them.

- Navigate to the Level setup screen.



- Select each receiver one at a time with the buttons under the LCD and rotate the knob to adjust the output to the desired level.

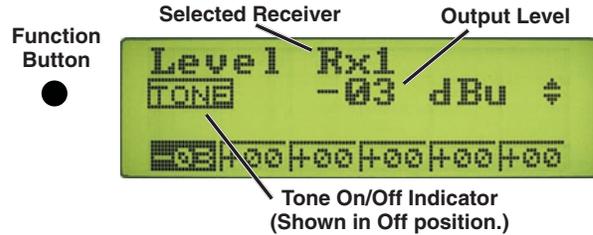

- Use the Tone Generator to adjust other equipment to match the output level from the receiver with full modulation of the transmitter. Press the Function Button to start the tone.

The indicator will reverse to a dark background with light letters when the tone is delivered to the selected output. Rotate the MENU/SELECT control to set the desired level.

**WARNING:** The 1 kHz reference tone is equivalent to full modulation at the transmitter. It is LOUD.

The test tone level is always at the 0dB reference level (full modulation of the wireless system), which is the level at which the first red "limit" light comes on at the transmitter.

The highest level that the equipment downstream will ever see before the receiver clips is 4.5 dB higher than the test tone. Note that this is **output** headroom. Over the entire 30+ dB range of the limiter in a Lectrosonics transmitter, the output at the receiver goes up only 4.5 dB or less.

**NOTE:** The tone is a sine wave with about 1% distortion

### Selecting Audio Phase

Microphone wiring and other vagaries can alter the phase of an audio signal. To compensate for this, the phase of the audio output of each receiver module can be inverted.

1. Navigate to the Phase setup screen.



2. Select each receiver module with the Receiver Select Button and adjust the phase with the MENU/SELECT control.


## Selecting Transmitter Battery Status Monitoring Mode

The receiver will monitor the status of the batteries in the transmitters and display it when used with certain transmitters, such as Lectrosonics 200 Series and Digital Hybrid models. The type of battery being used in the transmitter must be defined in the Tx Batt setup screen.

**NOTE:** The Compat Mode (compatibility mode) set for each receiver module will determine which battery monitoring methods are available

The Tx Batt setup screen allows you to select the exact battery being used in the transmitter to provide more accurate battery level monitoring. Alkaline, lithium and rechargeable AA and 9V types are commonly used. The voltage declines gradually over the life of alkaline and lithium types, so the voltage can be estimated and displayed by the receiver. Rechargeable types, on the other hand, maintain almost constant voltage as they discharge, so a timer is provided in the receiver to track operating time and anticipate the need for battery changes.

1. Navigate to the Tx Batt setup screen.

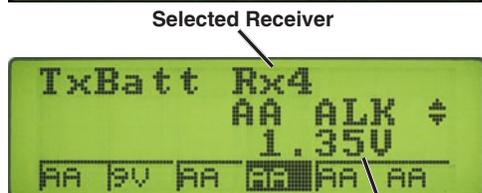

Battery Types for Each Receiver Module

Current Transmitter Battery Voltage (when available)

2. Select each receiver module with the Receiver Select Button and set the battery type being used in the corresponding transmitter.

- 9V ALK** Transmitter uses a 9V alkaline battery. Monitor voltage with battery icon in main window.
- 9V LTH** Transmitter uses a 9V lithium battery. Monitor voltage with battery icon in main window.
- 9V TIM** Transmitter uses a 9V battery. Display its voltage normally in the battery level window but monitor its status with the battery timer in the main window.
- AA ALK** Transmitter uses a AA alkaline battery. Monitor voltage with battery icon in main window.
- AA LTH** Transmitter uses a AA lithium battery. Monitor voltage with battery icon in main window.
- AA TIM** Transmitter uses an AA battery. Display its voltage normally in the battery level window but monitor its status with the battery timer in the main window.


The 9V TIM and AA TIM settings are most useful for rechargeable batteries, all or most of which do not exhibit reliably identifiable voltage drops as they discharge.

In compatibility modes other than 400 Series and 200 Series, no battery telemetry information is available so the TXBAT setup screen offers only two choices:

- NOTIMER** Display no transmitter battery status in the main window.
- TIMER** Monitor the transmitter battery status with the battery timer in the main window.

If the selected receiver module is part of a ratio diversity pair, the battery type will be automatically set for both units in the pair. If the selected receiver module is part of a frequency diversity pair, the battery type is set independently for each receiver in the pair since there are two transmitters in use.

3. When either the AA TIM or 9V TIM (timer) mode is selected, press the Function Button to reset ("ZERO") the timer.

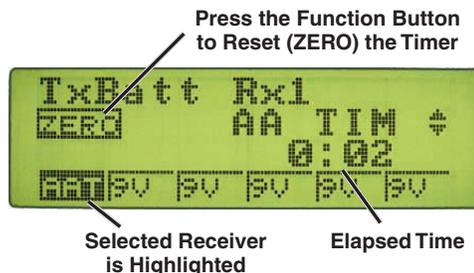


Press the Function Button to Reset (ZERO) the Timer


Selected Receiver is Highlighted

Elapsed Time is Highlighted


Battery status is displayed on the receiver detail screen, the overview screen and the info screen.

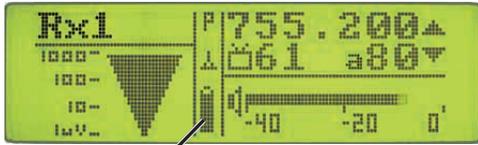

Battery Gauges

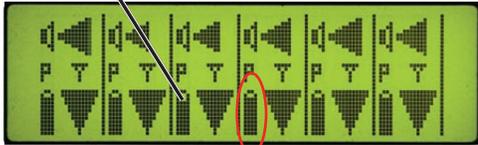


The display changes to a numerical readout when a timer mode is selected.

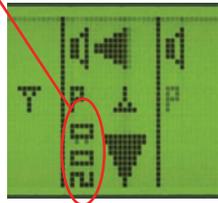


### Locking Out the Front Panel Controls

Navigate to the LockSet setup screen.

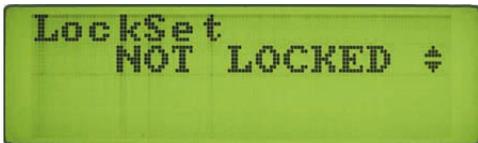

Rotate the MENU/SELECT control to the LOCKED or NOT LOCKED setting and press the control.

When LOCKED is selected, no changes can be made to the configuration with the front panel controls. If an attempt is made to change a setting, the LCD will flash a reminder that the controls are locked.

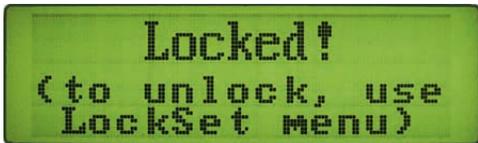


# Installing LecNet2™ Software and USB Driver

LecNet2 software includes VRpanel for easy setup and monitoring of the Venue Receiver using a computer system running Windows® 2000, XP or Vista™ operating systems.

## Installing LecNet2™ Software

1. Remove any previously installed versions of LecNet2™ software to make sure you are using the latest release.
2. Insert the LecNet2™ program disk supplied with the Venue Receiver into the CD-ROM drive on the computer system that will be used for set up and control.
3. The CD should automatically start the installation procedure. If it doesn't, click "Start" on the Windows Task Bar then click "Run..." Enter the Drive letter ("E" in the example) followed by "\Setup.Exe" as shown below.
4. Follow the on-screen instructions to install the

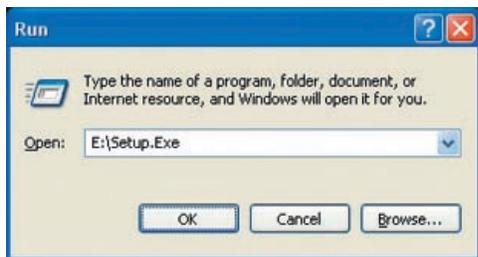

LecNet2™ software and the VRpanel for the Venue Receiver.

## Installing the LecNet2™ USB Driver

A Venue receiver can be connected to a computer with a USB cable or an RS-232 cable. Although the USB port offers increased speed and convenience over standard RS-232 links, it does require the installation of a LecNet2™ USB driver.

The LecNet2™ USB driver is not part of the standard Windows® 2000 and XP driver libraries; therefore, connecting a computer system to the Venue receiver for the first time differs from subsequent installations. There are a few differences between installing the LecNet2™ USB drivers on Windows 2000 versus Windows XP systems.

## USB Driver Installation (Windows XP) - First Time

When the VR is connected to a Windows XP computer system for the first time, the Windows® **Found New Hardware Wizard** automatically opens. Use the following procedure to install the LecNet2™ USB driver using the Wizard.

1. Place the LecNet2™ Installation Disk in the PC's CD-ROM drive.


2. On the first page of the Wizard, select **Install from a list or specific location (Advanced)** and click "Next>" to continue.




3. Select "Search for the best driver in these locations.", then check the box for "Search removable media (floppy, CD-ROM...)" and click Next > to continue to the next page.



4. Windows will search the CD for the driver and when it has found it. If a dialog box opens warning you that the driver has not passed Windows Logo Testing, click "Continue Anyway."

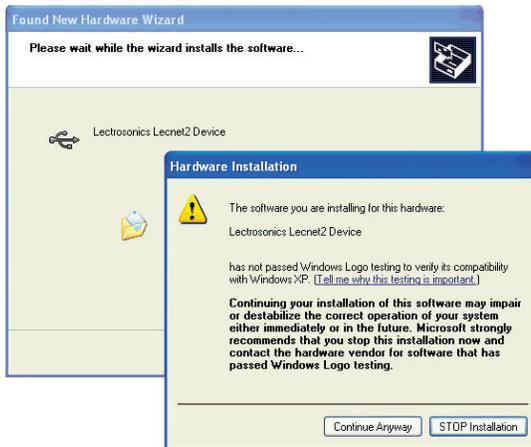

- When the driver installation is complete, the final page of the Wizard appears. Click **“Finish”** to close the **Found New Hardware Wizard**.

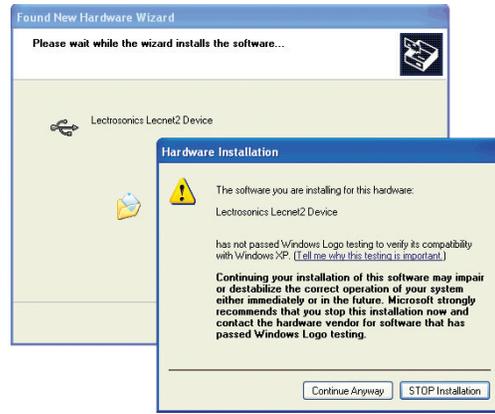

- When the driver installation is complete, the final page of the Wizard appears. Click **“Finish”** to close the **Found New Hardware Wizard**.



### USB Driver Installation (Windows XP) - Subsequent Installations

The Windows XP operating system regards all Lec-Net2™ devices as separate USB devices because each has a unique serial number. Windows XP will want to install the USB driver every time it encounters a Lec-Net2™ device whose serial number it does not recognize. The process is simplified if the LecNet2™ USB driver has already been installed at least once on the computer system. Use the following procedure if the LecNet2™ USB driver was previously installed on the computer system.

- On the first page of the Wizard, select **Install the software automatically (Recommended)** then click **“Next >”**.



- Windows will discover the previously installed driver. If a dialog box opens warning you that the driver has not passed Windows Logo Testing, click **“Continue Anyway.”**

## USB Driver Installation (Windows 2000) - First Time

Use the following procedure when a LecNet2™ device is connected to the Windows 2000-based PC for the first time.

1. Connect a USB cable between the Venue Receiver's USB port and the USB port on the computer system. Place the LecNet2™ Installation Disk in the PC's CD-ROM drive and click "Next >" to display the next page.



2. Select **Search for a suitable driver for my device (recommended)** and click "Next >" to continue.



3. Check only **CD-ROM drives** then click "Next >" to search the LecNet2™ CD for the USB driver.



4. When the driver is found, the LecNet2™ device name will be displayed along with the location of the driver. Click "Next >" to install the driver.



5. Click "Finish" when the installation is complete.



## USB Driver Installation (Windows 2000) Subsequent Installations

Once the LecNet2™ USB driver is installed in a Windows® 2000 system device, subsequent LectNet2 USB devices will invoke the **Found New Hardware Wizard** which will automatically load the LecNet2™ USB driver for the new device.

# Setting Up the Venue Receiver Using VRpanel


Once the LecNet™ software and USB drivers have been installed, the Venue receiver can be configured with a software interface and a computer using a Windows® 2000, XP or Vista™ operating system.

VRpanel is an intuitive software package that simplifies the setup and operation of the Venue receiver. This section of this manual is limited to the basic setup and configuration. More detailed explanations concerning usage and configuration are contained in the online Help.


The online Help also documents the serial commands used by external devices, including AMX® and Crestron® remote control systems, that can be used to control the Venue system.

## Opening VRpanel with USB Port

1. Launch VRpanel from **Start/All Programs/LecNet2**, or from a shortcut you create yourself.
2. When the “How to Begin” dialog box appears, select **I would like to Add VR detected via USB** and click **OK**.

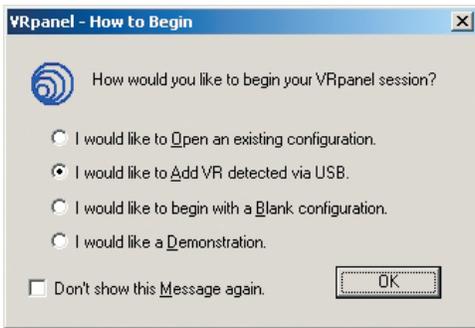


3. The **Add VR(s) via USB** dialog lists the ID & Serial Number of all Venue Systems connected to the computer via the USB. Select the VR (Venue receiver) to be monitored or configured and then click OK to add the receiver to the VRpanel configuration.

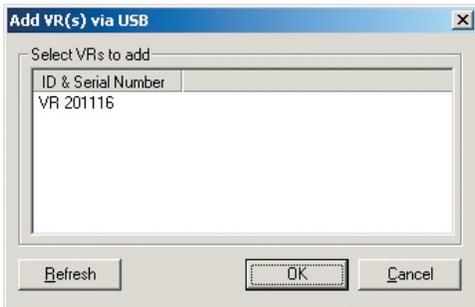


## Opening VRpanel with a COM Port

1. Launch the VRpanel software from **Start/All Programs/LecNet2**, or from a shortcut you create yourself.
2. Click on **I would like to begin with a Blank configuration**.

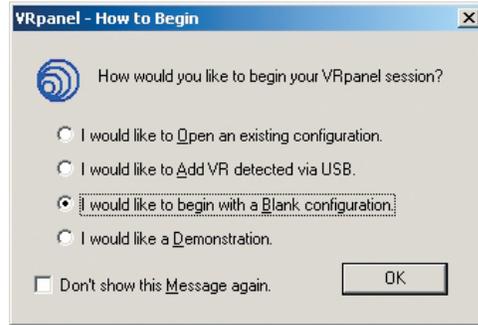


3. Click on **Add via COM1** (or whichever COM port is to be used) under the Configuration menu to the receiver to the configuration.

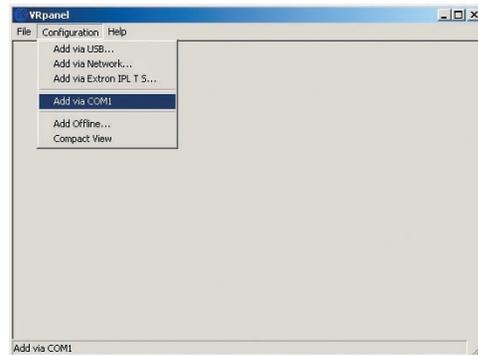

## VRpanel Main Window


The Main Window shows all connected Venue receivers with real time information for each receiver module.

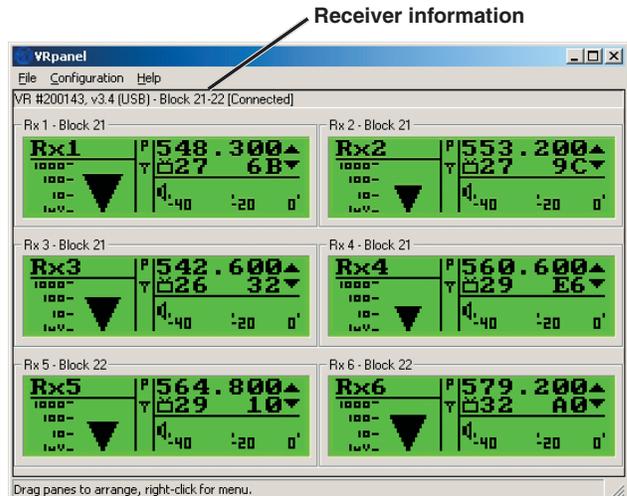


## Main Window Top Menu Items

The Main Window is organized in a straightforward manner with three pull down menus. Brief descriptions of these menus are presented here as an introduction. Full descriptions and instructions for the menu items are presented in the online Help.

With multiple Venue receivers, a pane opens for each receiver, with positions for up to six receiver modules in each. This lets you view and control all wireless systems simultaneously on a single computer screen.

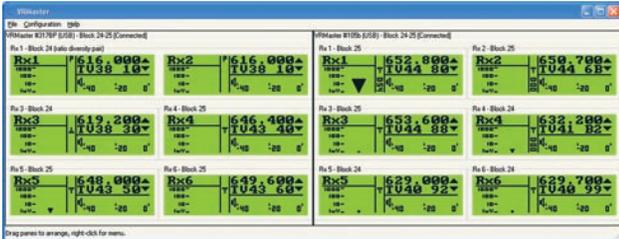


### File Menu

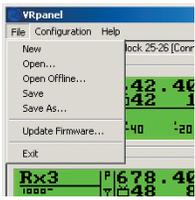

Items under the File Menu allow you to create, store and retrieve configurations from files stored on disk, and to update the firmware. **Open Offline** opens a configuration stored on disk without having hardware connected. See the online Help for more information pertaining to these items.

### Configuration Menu

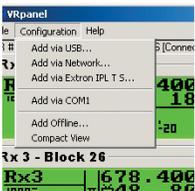


Connections to the Venue receiver via USB, a COM port, Network or an Extron IPL TS ethernet adapter are enabled in this menu.

**Compact View** reduces the size of objects in the main window, allowing more Venue receivers to be monitored and controlled at the same

time. **Add Offline** lets you add another Venue receiver to the configuration without having the hardware. See the online Help for more information pertaining to these items.


### Help Menu

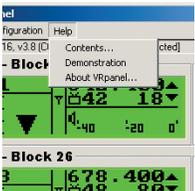

The items in this menu open the online Help, turn on and off a demonstration mode for VRpanel and view the software version information.

## Popup Menu Items


Right clicking anywhere in a receiver pane invokes a context-sensitive and position-sensitive popup menu. From there it is possible to alter settings, add or delete a Venue receiver from VRpanel, perform a spectrum scan, start the Walk Test Recorder and more.

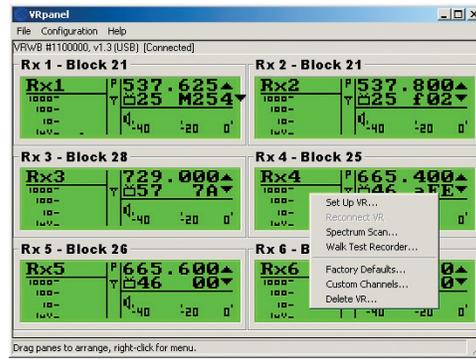

**NOTE:** Right clicking is the key to successful VRpanel operation!

### Set Up VR


The Set Up VR menu item opens a dialog box which is used to configure all settings for the receiver.

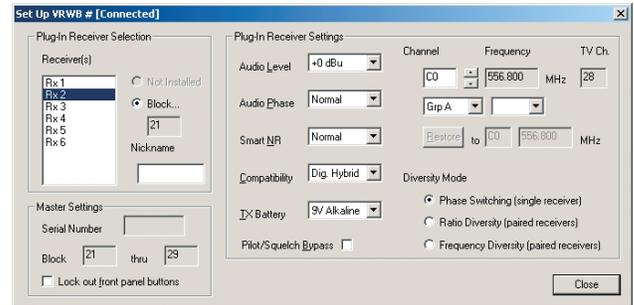

This dialog consists of three sections: Plug-In Receiver Selection, Plug-In Receiver Settings and Master Settings. All changes made are implemented in real time.

### Scanning Spectrum Analyzer


The Spectrum Scan menu item opens a dialogue box which is used to research and display the RF signals being picked up by the receiver. When the spectrum scan dialog box opens, click on **Run** to start the scan.

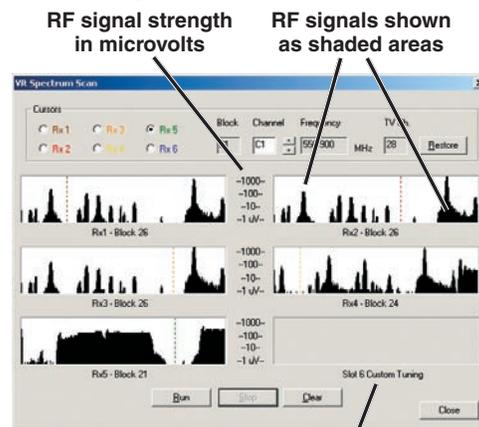

This module is set to Custom Tuning Mode - no scanning takes place

Separate panes are presented for each receiver module. The scan results are presented in a graphical display with shaded areas indicating frequency and strength of RF signals. A scale in the middle of the display indicates the approximate signal strength.


Scanning continues until it is suspended by the user. Click **Stop** to suspend the scanning. While scanning is suspended, select a receiver module with its radio button in the upper left of the dialog box. The cursor for the selected module will be highlighted, and can then be moved by left clicking and dragging the mouse. Click **Run** to resume the scan. Click **Clear** to stop the scan and clear the spectrum data. The behavior of these buttons is the same regardless of whether or not the scan is “complete.”

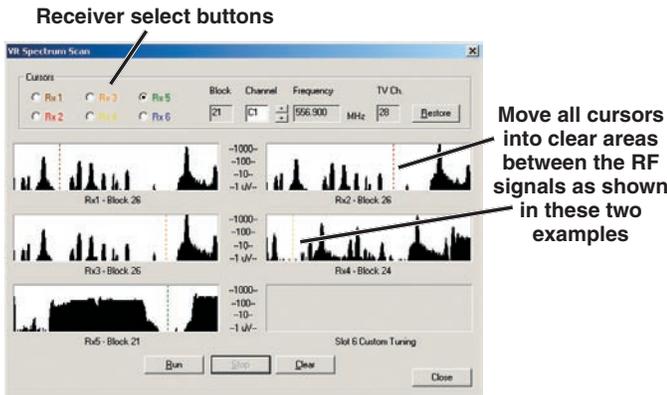

To avoid interference from external signals, the cursors should be placed in between the RF signals, as they are in the illustration above. To avoid interference caused by the systems themselves, refer to the sections entitled Pre-coordinated Frequencies and Diagnostics for details on multi-channel compatibility and testing.

### Walk Test Recorder

This menu item opens a dialog box providing a convenient method for testing the operation of selected receiver modules (or receiver module pairs) with the corresponding transmitters.

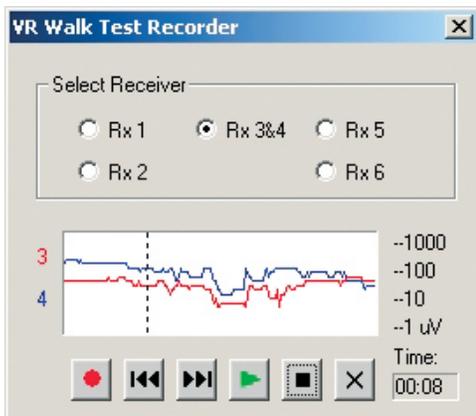

The Walk Test Recorder produces a chart recording of RF signal strength versus time. Receiver modules in switched diversity mode leave a single trace; diversity pairs leave dual traces.

An audio recording can be made while the recorder is running using the MC65 cable supplied with unit. Connect the PHONES jack output on the Venue Receiver front panel to the computer system’s audio input. Adjust the output level of the receiver with the LEVEL control on the front panel.

Click the **Record** button (red circle) to start the Walk Test Recorder and the **Stop** button (black square) to stop the recording process. Press the **Play** (green triangle) to play back the recording. **Rewind** and **Fast Forward** buttons move the window to the beginning and end of the chart. The cursor can also be moved with the computer mouse by clicking and dragging.

During the walk test, it helps to describe the location of the transmitter, e.g. “now going through the blue door,” “now passing the front gate,” etc. during the recording to make it easier to discern the bad locations. Start the playback of walk test and audio recordings from the beginning and observe the chart recording while you listen to the audio recording.

### Factory Defaults


Clicking this item in the popup menu restores the selected Venue System to the factory default settings.

The Factory Default Settings are:

<b>Level</b>	+00 dBu
<b>Phase</b>	NORMAL
<b>TxBatt</b>	9V ALK
<b>SmartNR</b>	NORMAL
<b>Compat</b>	Dig. Hybrid
<b>Tuning</b>	NORMAL MODE
<b>DivMode</b>	Switched
<b>LockSet</b>	NOT LOCKED
<b>RxCh</b>	8, 0

### Custom Channels

Click on this item to open a dialog box allowing you to create, save and edit customized frequency sets.

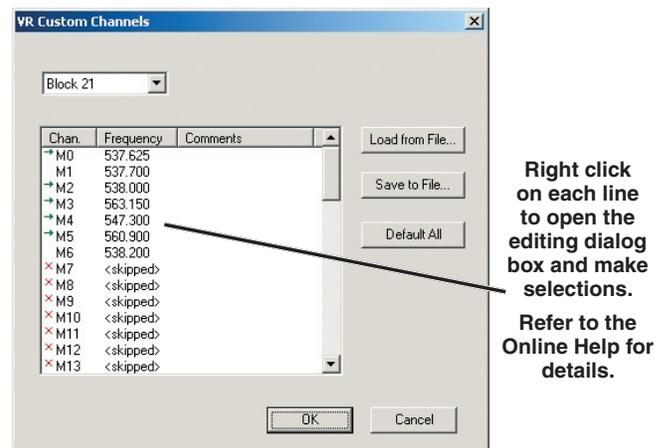

### Delete VR

Click on **Delete VR** in the popup menu to delete the selected Venue receiver from the current VRpanel configuration.

# Antenna Use and Placement

The Venue System is designed for rack mounting. Although it can be operated with two whip antennas, it is best to use remote antennas such as the SNA600 or ALP Series for optimum reception. Position the remote antennas at least three or four feet apart and not within three or four feet of large metal surfaces. If this is not possible, try to position the antennas so that they are as far away from the metal surface as is practical. It is also good to position them so that there is a direct “line of sight” between the transmitter and the receiver antennas.

In situations where the operating range is less than about 100 feet, the antenna positioning is much less critical. The length and type of cabling between antennas and the system, however, is critical. Long cable runs can experience serious signal loss. Lectrosonics offers in-line RF amplifiers suitable for compensating for this signal loss. Contact your dealer or the factory for more information.


A wireless transmitter sends a radio signal out in all directions. This signal will often bounce off nearby walls, ceilings, etc. and a strong reflection can arrive at the

receiver’s antennas along with the direct signal. If the direct and reflected signals are out of phase with each other and similar in strength, a cancellation or “dropout” may occur. A dropout can sound like audible noise (hiss, swishing or a “shhht” sound), or in severe cases, may result in a complete loss of both the carrier and the sound. Moving the transmitter even a few inches can change the sound of the dropout, or may even eliminate it. A dropout situation also may be either better or worse as a crowd fills or leaves the room.

The Venue System offers several different diversity reception methods which can overcome most dropout problems. In the event, however, that you do encounter a dropout problem, first try moving one of the remote antennas at least three or four feet from its current location. If dropouts are still a problem, try moving the antennas to entirely different locations.

Lectrosonics transmitters radiate power very efficiently, and the receivers are very sensitive, which reduces dropouts to an insignificant level. If, however, you do encounter dropouts frequently, call the factory or consult your dealer. There is probably a simple solution.

## Powering Remote RF Amplifiers

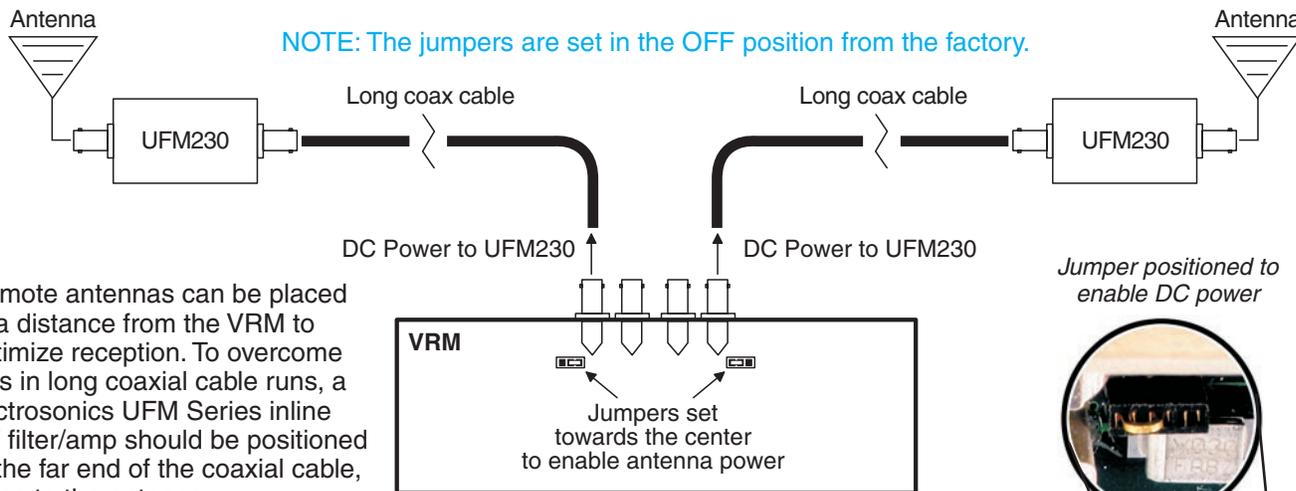


Remote antennas can be placed at a distance from the VRM to optimize reception. To overcome loss in long coaxial cable runs, a Lectrosonics UFM Series inline RF filter/amp should be positioned at the far end of the coaxial cable, close to the antenna.

With the amplifier in this position, gain is applied ahead of the loss to maximize the signal to noise ratio of the antenna system.

Power for the UFM amplifier can be supplied by the Venue receiver through the coaxial cable by setting jumpers on the main PC board toward the center of the board as shown. Disconnect power and then remove the top cover for access to the jumpers.

**NOTE:** It is best practice to enable this DC power ONLY when a UFM remote amplifier is used. Some antennas may present a short to the power supply. While the power supply is fused and it is unlikely that damage would occur, it is always best to disable the DC when it is not in use.

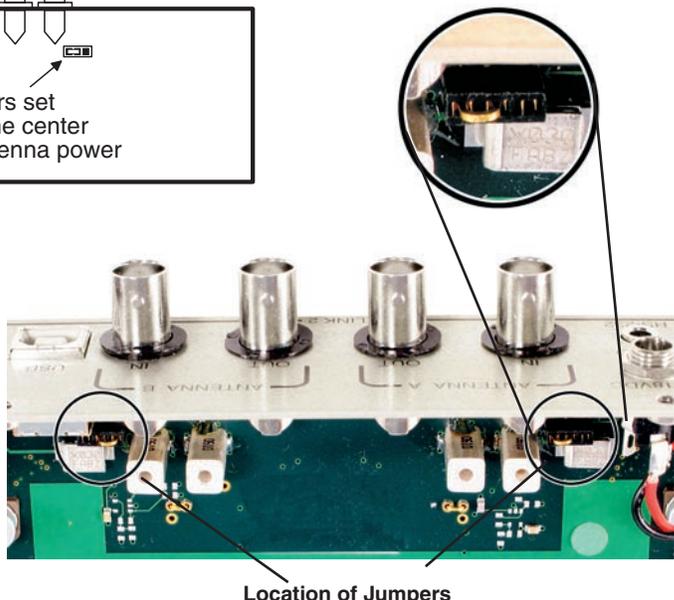

# Pre-coordinated Frequencies

Interference from IM (intermodulation) is a potential problem in all multi-channel wireless systems, so proper frequency coordination is always required to avoid noise, range and dropout problems. Your options to accomplish this include:

- Using the pre-coordinated frequency groups
- Performing a system checkout  
(See Multi-channel System Checkout)
- Calling Lectrosonics for assistance

## Compatible Frequency Table

Groupings of compatible frequencies have been created to minimize intermodulation problems in multiple channel wireless systems. The frequencies can be used with Digital Hybrid and analog Lectrosonics wireless equipment. Compatibility with other brands is likely, but not guaranteed by Lectrosonics.

The table provides two different sets of pre-coordinated frequencies for frequency blocks 470 through 29. The table is constructed to create a visual pattern of compatible frequencies to make it easier to use. The frequencies are stored in memory in various products and included in the VRpanel software.

Pre-coordinated frequencies are arranged in four groups as shown at right.

The uppermost eight frequencies comprise Grp a, the eight just below them comprise Grp b, and so on.

**BLOCK 22**

FREQ	SW SET	US TV CH
563.700	0,5	tv29
564.300	0,B	tv29
565.200	1,4	tv29
565.800	1,A	tv29
567.100	2,7	tv30
568.000	3,0	tv30
568.500	3,5	tv30
569.300	3,D	tv30
575.700	7,D	tv31
577.900	9,3	tv31
578.600	9,A	tv32
579.900	A,7	tv32
581.700	B,9	tv32
582.600	C,2	tv32
585.200	D,C	tv33
587.500	F,3	tv33

Grp a  
Grp b  
Grp c  
Grp d  
Displayed as "GROUP a" through "GROUP d" in the LCD and as "Grp a" through "Grp d" in VRpanel

**BLOCK 22**

FREQ	SW SET	US TV CH
570.100	4,5	tv30
570.700	4,B	tv30
571.600	5,4	tv30
572.200	5,A	tv31
573.200	6,4	tv31
574.400	7,0	tv31
574.900	7,5	tv31
575.500	7,B	tv31
581.100	B,3	tv32
582.100	B,D	tv32
582.600	C,2	tv32
584.300	D,3	tv32
585.000	D,A	tv32
585.600	E,0	tv32
586.300	E,7	tv32
588.100	F,9	tv32

	BLOCK 470	BLOCK 19	BLOCK 20	BLOCK 21	BLOCK 22	BLOCK 23	
	FREQ	SW SET	US TV CH	FREQ	SW SET	US TV CH	
Grp A	NOT AVAILABLE	486.900	0,5	TV16	538.100	0,5	tv25
	NOT AVAILABLE	487.500	0,B	TV16	538.700	0,B	tv25
	NOT AVAILABLE	488.400	1,4	TV17	539.600	1,4	tv25
	NOT AVAILABLE	489.000	1,A	TV17	540.200	1,A	tv25
	NOT AVAILABLE	490.300	2,7	TV17	541.500	2,7	tv25
	NOT AVAILABLE	491.200	3,0	TV17	542.400	3,0	tv26
	NOT AVAILABLE	491.700	3,5	TV17	542.900	3,5	tv26
	NOT AVAILABLE	492.500	3,D	TV17	543.700	3,D	tv26
Grp B	473.300	2,0	TV14	550.100	7,D	tv27	
	475.500	3,6	TV14	552.300	9,3	tv27	
	476.200	3,D	TV15	553.000	9,A	tv27	
	477.500	4,A	TV15	554.300	A,7	tv28	
	479.300	5,C	TV15	556.100	B,9	tv28	
	480.200	6,5	TV15	557.000	C,2	tv28	
	482.800	7,F	TV16	559.600	D,C	tv28	
	485.100	9,6	TV16	561.900	F,3	tv29	
Grp C	NOT AVAILABLE	493.300	4,5	TV17	544.500	4,5	tv26
	NOT AVAILABLE	493.900	4,B	TV17	545.100	4,B	tv26
	NOT AVAILABLE	494.800	5,4	TV18	546.000	5,4	tv26
	NOT AVAILABLE	495.400	5,A	TV18	546.600	5,A	tv26
	NOT AVAILABLE	496.400	6,4	TV18	547.600	6,4	tv26
	NOT AVAILABLE	497.600	7,0	TV18	548.800	7,0	tv27
	NOT AVAILABLE	498.100	7,5	TV18	549.300	7,5	tv27
	NOT AVAILABLE	498.700	7,B	TV18	549.900	7,B	tv27
Grp D	478.700	5,6	TV15	555.500	B,3	tv28	
	479.700	6,0	TV15	556.500	B,D	tv28	
	480.200	6,5	TV15	557.000	C,2	tv28	
	481.900	7,6	TV15	558.700	D,3	tv28	
	482.600	7,D	TV16	559.400	D,A	tv28	
	483.200	8,3	TV16	560.000	E,0	tv29	
	483.900	8,A	TV16	560.700	E,7	tv29	
	485.700	9,C	TV16	562.500	F,9	tv29	

**\* NOTE: These frequencies can also be manually tuned with block 470 modules**

## Compatibility Diagram

Compatibility follows the pattern illustrated in the diagram at right.

**Grp a** and **Grp b** contain the 16 frequencies in the table below (upper orange/white set).

**Grp c** and **Grp d** contain the 16 frequencies shown in the table below (lower blue/white set).

**NOTE:** There is no assurance that frequencies are compatible between the upper orange/white set and the lower blue/white set. Combined use of frequencies from both sets requires testing with the procedures outlined in the following section entitled **Diagnostics - Multi-channel System Checkout**

These frequencies share RF spectrum with TV channels. The upper orange/white set and the lower blue/white set of frequencies provide two different lists of TV channels. Use the set with fewer active TV stations in the area where you are operating.

Active TV station signals can be discovered by scanning with the Venue receiver, or researched in advance on this web site: [www.fccinfo.com](http://www.fccinfo.com).

All 16 within the same block are compatible

The upper eight are compatible with the lower eight in the adjacent blocks.

The lower eight are compatible with the upper eight in the adjacent blocks.

BLOCK 24			BLOCK 25		
FREQ	SW SET	US TV CH	FREQ	SW SET	US TV CH
621.300	4.5	tv39	646.900	4.5	tv43
621.900	4.8	tv39	647.500	4.8	tv43
622.800	5.4	tv39	648.400	5.4	tv43
623.400	5.8	tv39	649.000	5.8	tv43
624.400	6.4	tv39	650.000	6.4	tv43/44
625.600	7.0	tv39	651.200	7.0	tv44
626.100	7.5	tv40	651.700	7.5	tv44
626.700	7.8	tv40	652.300	7.8	tv44
632.300	B.3	tv41	657.900	B.3	tv45
633.300	B.D	tv41	658.900	B.D	tv45
633.800	C.2	tv41	659.400	C.2	tv45
635.500	D.3	tv41	661.100	D.3	tv45
636.200	D.A	tv41	661.800	D.A	tv45
636.800	E.0	tv41	662.400	E.0	tv46
637.500	E.7	tv41	663.100	E.7	tv46
639.300	F.9	tv42	664.900	F.9	tv46

BLOCK 24			BLOCK 25		
FREQ	SW SET	US TV CH	FREQ	SW SET	US TV CH
621.300	4.5	tv39	646.900	4.5	tv43
621.900	4.8	tv39	647.500	4.8	tv43
622.800	5.4	tv39	648.400	5.4	tv43
623.400	5.8	tv39	649.000	5.8	tv43
624.400	6.4	tv39	650.000	6.4	tv43/44
625.600	7.0	tv39	651.200	7.0	tv44
626.100	7.5	tv40	651.700	7.5	tv44
626.700	7.8	tv40	652.300	7.8	tv44
632.300	B.3	tv41	657.900	B.3	tv45
633.300	B.D	tv41	658.900	B.D	tv45
633.800	C.2	tv41	659.400	C.2	tv45
635.500	D.3	tv41	661.100	D.3	tv45
636.200	D.A	tv41	661.800	D.A	tv45
636.800	E.0	tv41	662.400	E.0	tv46
637.500	E.7	tv41	663.100	E.7	tv46
639.300	F.9	tv42	664.900	F.9	tv46

BLOCK 24			BLOCK 25		
FREQ	SW SET	US TV CH	FREQ	SW SET	US TV CH
621.300	4.5	tv39	646.900	4.5	tv43
621.900	4.8	tv39	647.500	4.8	tv43
622.800	5.4	tv39	648.400	5.4	tv43
623.400	5.8	tv39	649.000	5.8	tv43
624.400	6.4	tv39	650.000	6.4	tv43/44
625.600	7.0	tv39	651.200	7.0	tv44
626.100	7.5	tv40	651.700	7.5	tv44
626.700	7.8	tv40	652.300	7.8	tv44
632.300	B.3	tv41	657.900	B.3	tv45
633.300	B.D	tv41	658.900	B.D	tv45
633.800	C.2	tv41	659.400	C.2	tv45
635.500	D.3	tv41	661.100	D.3	tv45
636.200	D.A	tv41	661.800	D.A	tv45
636.800	E.0	tv41	662.400	E.0	tv46
637.500	E.7	tv41	663.100	E.7	tv46
639.300	F.9	tv42	664.900	F.9	tv46

BLOCK 24		
FREQ	SW SET	US TV CH
614.900	0.5	tv38
615.500	0.8	tv38
616.400	1.4	tv38
617.000	1.8	tv38
618.300	2.7	tv38
619.200	3.0	tv38
619.700	3.5	tv38
620.500	3.0	tv39
626.900	7.0	tv40
629.100	9.3	tv40
629.800	9.8	tv40
631.100	A.7	tv40
632.900	B.9	tv41
633.800	C.2	tv41
636.400	D.C	tv41
638.700	F.3	tv42

BLOCK 25		
FREQ	SW SET	US TV CH
640.500	0.5	tv42
641.100	0.8	tv42
642.000	1.4	tv42
642.600	1.8	tv42
643.900	2.7	tv42
644.800	3.0	tv43
645.300	3.5	tv43
646.100	3.0	tv43
652.500	7.0	tv44
654.700	9.3	tv44
655.400	9.8	tv44
656.700	A.7	tv45
658.500	B.9	tv45
659.400	C.2	tv45
662.000	D.C	tv45/46
664.300	F.3	tv46

BLOCK 26		
FREQ	SW SET	US TV CH
666.100	0.5	tv46
666.700	0.8	tv46
667.600	1.4	tv46
668.200	1.8	tv47
669.500	2.7	tv47
670.400	3.0	tv47
670.900	3.5	tv47
671.700	3.0	tv47
678.100	7.0	tv48
680.300	9.3	tv49
681.000	9.8	tv49
682.300	A.7	tv49
684.100	B.9	tv49
685.000	C.2	tv49
687.600	D.C	tv50
689.900	F.3	tv50

BLOCK 27		
FREQ	SW SET	US TV CH
691.700	0.5	tv50
692.300	0.8	tv51
693.200	1.4	tv51
693.800	1.8	tv51
695.100	2.7	tv51
696.000	3.0	tv51
696.500	3.5	tv51
697.300	3.0	tv51
703.700	7.0	tv52
705.900	9.3	tv53
706.600	9.8	tv53
707.900	A.7	tv53
709.700	B.9	tv53
710.600	C.2	tv54
713.200	D.C	tv54
715.500	F.3	tv54

BLOCK 28		
FREQ	SW SET	US TV CH
717.300	0.5	tv55
717.900	0.8	tv55
718.800	1.4	tv55
719.400	1.8	tv55
720.700	2.7	tv55
721.600	3.0	tv55
722.100	3.5	tv56
722.900	3.0	tv56
729.300	7.0	tv57
731.500	9.3	tv57
732.200	9.8	tv57
733.500	A.7	tv57
735.300	B.9	tv58
736.200	C.2	tv58
738.800	D.C	tv58
741.100	F.3	tv59

BLOCK 29		
FREQ	SW SET	US TV CH
742.900	0.5	tv59
743.500	0.8	tv59
744.400	1.4	tv59
745.000	1.8	tv59
746.300	2.7	tv60
747.200	3.0	tv60
747.700	3.5	tv60
748.500	3.0	tv60
754.900	7.0	tv61
757.100	9.3	tv61
757.800	9.8	tv61
759.100	A.7	tv62
760.900	B.9	tv62
761.800	C.2	tv62
764.400	D.C	tv63
766.700	F.3	tv63

BLOCK 24		
FREQ	SW SET	US TV CH
621.300	4.5	tv39
621.900	4.8	tv39
622.800	5.4	tv39
623.400	5.8	tv39
624.400	6.4	tv39
625.600	7.0	tv39
626.100	7.5	tv40
626.700	7.8	tv40
632.300	B.3	tv41
633.300	B.D	tv41
633.800	C.2	tv41
635.500	D.3	tv41
636.200	D.A	tv41
636.800	E.0	tv41
637.500	E.7	tv41
639.300	F.9	tv42

BLOCK 25		
FREQ	SW SET	US TV CH
646.900	4.5	tv43
647.500	4.8	tv43
648.400	5.4	tv43
649.000	5.8	tv43
650.000	6.4	tv43/44
651.200	7.0	tv44
651.700	7.5	tv44
652.300	7.8	tv44
657.900	B.3	tv45
658.900	B.D	tv45
659.400	C.2	tv45
661.100	D.3	tv45
661.800	D.A	tv45
662.400	E.0	tv46
663.100	E.7	tv46
664.900	F.9	tv46

BLOCK 26		
FREQ	SW SET	US TV CH
672.500	4.5	tv47
673.100	4.8	tv47
674.000	5.4	tv47/48
674.600	5.8	tv48
675.600	6.4	tv48
676.800	7.0	tv48
677.300	7.5	tv48
677.900	7.8	tv48
683.500	B.3	tv49
684.500	B.D	tv49
685.000	C.2	tv49
686.700	D.3	tv50
687.400	D.A	tv50
688.000	E.0	tv50
688.700	E.7	tv50
690.500	F.9	tv50

BLOCK 27		
FREQ	SW SET	US TV CH
698.100	4.5	tv52
698.700	4.8	tv52
699.600	5.4	tv52
700.200	5.8	tv52
701.200	6.4	tv52
702.400	7.0	tv52
702.900	7.5	tv52
703.500	7.8	tv52
709.100	B.3	tv53
710.100	B.D	tv54
710.600	C.2	tv54
712.300	D.3	tv54
713.000	D.A	tv54
713.800	E.0	tv54
714.300	E.7	tv54
716.100	F.9	tv55

BLOCK 28		
FREQ	SW SET	US TV CH
723.700	4.5	tv56
724.300	4.8	tv56
725.200	5.4	tv56
725.800	5.8	tv56
726.800	6.4	tv56
728.000	7.0	tv56/57
728.500	7.5	tv57
729.100	7.8	tv57
734.700	B.3	tv58
735.700	B.D	tv58
736.200	C.2	tv58
737.900	D.3	tv58
738.600	D.A	tv58
739.200	E.0	tv58
739.900	E.7	tv58
741.700	F.9	tv59

BLOCK 29		
FREQ	SW SET	US TV CH
749.300	4.5	tv60
749.900	4.8	tv60
750.800	5.4	tv60
751.400	5.8	tv60
752.400	6.4	tv61
753.600	7.0	tv61
754.100	7.5	tv61
754.700	7.8	tv61
760.300	B.3	tv62
761.300	B.D	tv62
761.800	C.2	tv62
763.500	D.3	tv62
764.200	D.A	tv63
764.800	E.0	tv63
765.500	E.7	tv63
767.300	F.9	tv63

# Diagnostics

## Multi-channel System Checkout

Interference can result from a wide variety of sources including TV station signals, other wireless equipment in use nearby, or from intermodulation within a multi-channel wireless system itself. Regardless of how the frequencies were coordinated, a final checkout procedure is always a good idea.

Scanning with the RF spectrum analyzer built into the Venue system will identify external RF signals, but it does not address the compatibility of the selected frequencies.

The pre-coordinated frequencies on the chart on the previous pages address in-system intermodulation, but obviously cannot take into account RF signals from external sources that may be present in the location where the system will be operating.

In some cases, you can run the scanner to find clear TV channels, then find enough pre-coordinated frequencies in the tuning groups (Grp a through Grp d) to operate on the clear TV channels. Even so, it is still a good idea to go through the check out procedure because you can encounter interference from other wireless, IFB and intercom systems when you get to the production or installation site.

1. **Set up the system for testing.**  
Place antennas in the position in which they will be used and connect to the receivers. Place transmitters about 3 to 5 feet apart, about 25 to 30 feet from the receiver antennas. If possible, have all other equipment on the set, stage or location turned on as well, especially any mixing or recording equipment that will be used with the wireless system.
2. **Set all receivers on clear channels.**  
Turn on all receivers, but leave the transmitters off. Observe at the RF signal strength indicator for each receiver module. If a signal is present, change the frequency to a clear channel where no signal is indicated. If a completely clear channel cannot be found, select the frequency with the lowest RF level indication. Once all receiver modules are on clear channels, go to step 3.
3. **Turn each transmitter on one at a time.**  
Start with all transmitters turned off. As you turn on each one, look at the matching receiver to verify a strong RF signal is received. Then, look at the other receivers and see if one of them is also picking up the signal. Only the matching receiver should indicate a signal. Change frequencies on either system slightly until all channels pass this test, then check again to see that all channels are still clear as done in step 2.

4. **Turn each transmitter off one at a time.**  
With all transmitters and receivers turned on, turn each transmitter off one at a time, in turn, and look at the RF level indicator on the matching receiver module. The RF level should disappear or drop to a very low level. If it does not, change frequency on that receiver and transmitter and try it again. When a clear frequency is found, turn the transmitter on and move on to the next channel.

**IMPORTANT:** Any time a frequency is changed on any of the systems in use, you must start at the beginning and go through this procedure again for all systems. With a little practice, you will be able to do this quickly and save yourself some “multi-channel grief.”


## Pilot Tone Bypass

Some wireless equipment uses a supersonic “pilot tone” to control the squelch (audio mute) of a receiver module to keep it silent until a valid signal is received. When a signal with the correct pilot tone is received, the squelch opens and audio is delivered to the output. Pilot tone squelch control also eliminates transients (clicks and pops) when transmitters are turned on and off. Pilot tone is supported in the Digital Hybrid compatibility modes for those systems that use it.

Pilot tone control can be bypassed as a diagnostic tool. Bypass opens the audio output of the receiver unconditionally, allowing you to listen to any signals entering the receiver to help identify their source. Pilot tone bypass will also allow you to use a transmitter that has a defective pilot tone circuit.

**CAUTION:** When pilot tone is bypassed and the transmitter is turned off, excessive noise will be present. Turn the audio level down before bypassing pilot tone.

Navigate to the PilotBP setup screen.

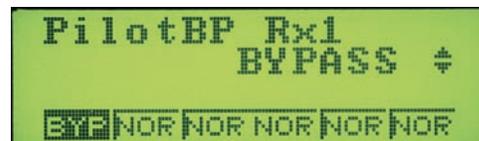

Select the receiver module with the Receiver Select Button and rotate the MENU/SELECT control to select BYPASS. In this example, the pilot tone for receiver module 1 is set to BYPASS (BYP) and the others are set to NORMAL (NOR).

# Accessories and Common Replacement Parts

## Remote Antennas

- ALP Series LPDA (log periodic dipole array) models
- SNA600 folding dipole antenna
- ALP Kit mounting hardware



## Coaxial Cable

- ARG2 coaxial cable - 2 ft. length
- ARG15 coaxial cable - 15 ft. length
- ARG25 coaxial cable - 25 ft. length
- ARG50 coaxial cable - 50 ft. length
- ARG100 coaxial cable - 100 ft. length

## Coaxial RF Amplifier

- UFM230 broadband RF amplifier - 230 MHz BW
- UFM50 narrowband RF amplifier - 50 MHz BW

## Common Replacement Parts

- DCR15/1A6U power supply
- 24088 Pre-coordinated frequency groups (folded sheet)
- 21710-1 LecNet Cable for AMX/Crestron control
- 21529-1 LecNet Cable for RS-232 control
- 21713 USB Cable - 6 ft. long
- MC65 Cable - 1/4 inch male TRS to mini male TRS
- P1196 white receiver retaining clip
- P1204 receiver connector cover



- ARG2, ARG15 are Belden RG-8/X cable
- ARG25, 50, 100 are Belden 9913F cable

## USB Cable

- #21713 - Cable, MB USB A2B - 6ft. length

## Software Install Disk

Installation Software



UFM230



Install Disk



USB - #21713

## Service and Repair

If your system malfunctions, you should attempt to correct or isolate the trouble before concluding that the equipment needs repair. Make sure you have followed the setup procedure and operating instructions. Check the interconnecting cables and then go through the TROUBLESHOOTING section in this manual.

We strongly recommend that you **do not** try to repair the equipment yourself and **do not** have the local repair shop attempt anything other than the simplest repair. If the repair is more complicated than a broken wire or loose connection, send the unit to the factory for repair and service. Don't attempt to adjust any controls inside the units. Once set at the factory, the various controls and trimmers do not drift with age or vibration and never require readjustment. **There are no adjustments inside that will make a malfunctioning unit start working.**

LECTROSONICS' Service Department is equipped and staffed to quickly repair your equipment. In warranty repairs are made at no charge in accordance with the terms of the warranty. Out-of-warranty repairs are charged at a modest flat rate plus parts and shipping. Since it takes almost as much time and effort to determine what is wrong as it does to make the repair, there is a charge for an exact quotation. We will be happy to quote approximate charges by phone for out-of-warranty repairs.

### Returning Units for Repair

For timely service, please follow the steps below:

- A. DO NOT return equipment to the factory for repair without first contacting us by letter or by phone. We need to know the nature of the problem, the model number and the serial number of the equipment. We also need a phone number where you can be reached 8 A.M. to 4 P.M. (U.S. Mountain Standard Time).
- B. After receiving your request, we will issue you a return authorization number (R.A.). This number will help speed your repair through our receiving and repair departments. The return authorization number must be clearly shown on the **outside** of the shipping container.
- C. Pack the equipment carefully and ship to us, shipping costs prepaid. If necessary, we can provide you with the proper packing materials. UPS is usually the best way to ship the units. Heavy units should be "double-boxed" for safe transport.
- D. We also strongly recommend that you insure the equipment, since we cannot be responsible for loss of or damage to equipment that you ship. Of course, we insure the equipment when we ship it back to you.

**Mailing address:**

Lectrosonics, Inc.  
PO Box 15900  
Rio Rancho, NM 87174  
USA

**Shipping address:**

Lectrosonics, Inc.  
581 Laser Rd.  
Rio Rancho, NM 87124  
USA

**Telephone:**

(505) 892-4501  
(800) 821-1121 Toll-free  
(505) 892-6243 Fax

**Web:**

[www.lectrosonics.com](http://www.lectrosonics.com)

**E-mail (general):**

[sales@lectrosonics.com](mailto:sales@lectrosonics.com)

**E-mail (service):**

[service.repair@lectrosonics.com](mailto:service.repair@lectrosonics.com)



## LIMITED ONE YEAR WARRANTY

The equipment is warranted for one year from date of purchase against defects in materials or workmanship provided it was purchased from an authorized dealer. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment.

Should any defect develop, Lectrosonics, Inc. will, at our option, repair or replace any defective parts without charge for either parts or labor. If Lectrosonics, Inc. cannot correct the defect in your equipment, it will be replaced at no charge with a similar new item. Lectrosonics, Inc. will pay for the cost of returning your equipment to you.

This warranty applies only to items returned to Lectrosonics, Inc. or an authorized dealer, shipping costs prepaid, within one year from the date of purchase.

This Limited Warranty is governed by the laws of the State of New Mexico. It states the entire liability of Lectrosonics Inc. and the entire remedy of the purchaser for any breach of warranty as outlined above. NEITHER LECTROSONICS, INC. NOR ANYONE INVOLVED IN THE PRODUCTION OR DELIVERY OF THE EQUIPMENT SHALL BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THIS EQUIPMENT EVEN IF LECTROSONICS, INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE LIABILITY OF LECTROSONICS, INC. EXCEED THE PURCHASE PRICE OF ANY DEFECTIVE EQUIPMENT.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.



581 Laser Road NE • Rio Rancho, NM 87124 USA • [www.lectrosonics.com](http://www.lectrosonics.com)  
(505) 892-4501 • (800) 821-1121 • fax (505) 892-6243 • [sales@lectrosonics.com](mailto:sales@lectrosonics.com)